

Cleaning a SuperTouch or an EasyKey console

- Exercise care when cleaning as the surfaces and exteriors of a console can be easily scratched.
- Take the following steps when cleaning.
- The following images are for reference only. Real-life situations may differ from what is shown in the images.

1 - Power off the pair of lanes, by disconnecting the power cord from the 4HD-5HD/HUB or by turning off the breaker.

- When disconnecting the power cord from the socket: hold the power cable by the plug and do not touch the cable with wet hands. Otherwise, an electric shock may result.



2 - Wipe the surface of the console with a clean, soft and dry cloth.



3 - Do not apply a cleaning agent that contains alcohol, solvent, acid or harsh surfactant to the console's surfaces.



4 - Never spray water, detergent or any liquid directly on the product.



5 - Avoid getting liquids inside the unit as this may damage the unit and void the manufacturer warranty.



6 - Wet a soft and dry cloth in water and wring thoroughly to clean the exterior of the console.

7 - Power on the pair of lanes when cleaning is finished.

